

ECU Setup

Ensure the following "Lambda Sensor" parameters are set.

SENSOR SETUP - CHANNEL ASSIGNMENTS - SCREEN 1

La1	VALUE = 9
La2	VALUE = 10

SENSOR SETUP - SENSOR CALIBRATION


La1 (La2)	VALUE = 38
-------------	------------

SENSOR SETUP - LAMBDA SENSOR SETUP

Type	VALUE = 1
Cal Number	VALUE = number engraved on sensor
Quick Lambda Mode	Will depend on how many sensors are used and channel assignments

INPUT/OUTPUT FUNCTIONS - AUXILIARY OUTPUT

Aux Output	FUNCTION = 9
------------	--------------

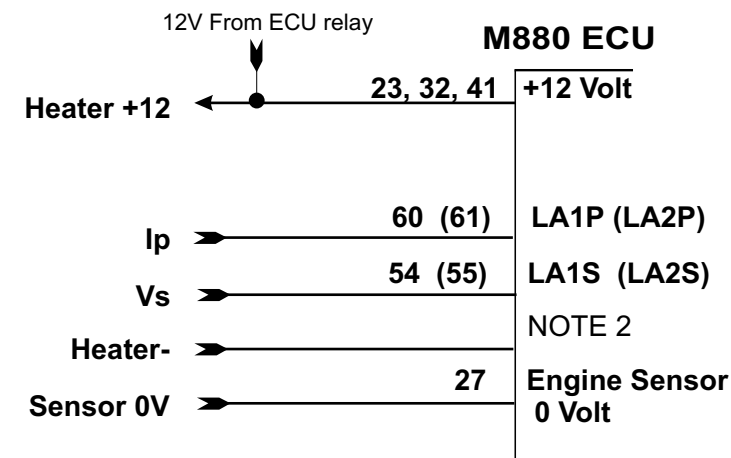

Note 1

Information in brackets () indicates wiring for Lambda 2 input.

Note 2

Any AUX, Injector or Ignition output can be used for the Heater control.